
JAMB MACHINES

STINGER

AUTOMATIC STOP-STITCHER FOR INTERIOR JAMB

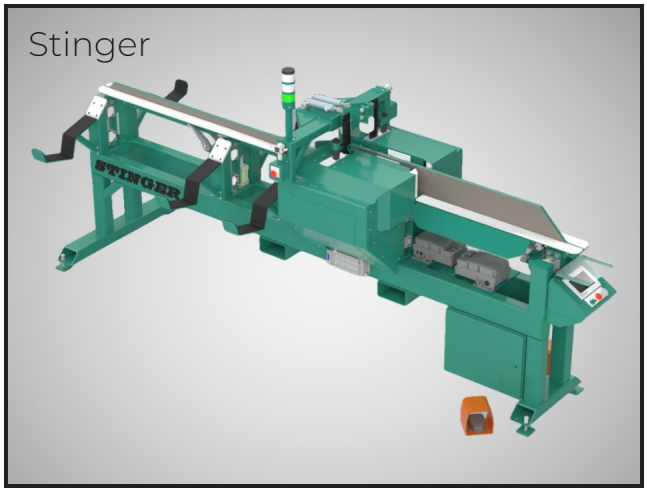

OVERVIEW

The Stinger is a high-production, flow-through stop stitcher that automatically fastens door stop to jambs and headers.

The operator sets the jamb and stop on the shelf and presses the foot pedal. The Stinger aligns them, applies the programmed fastening pattern, and feeds the assembly out onto a staging rack.

STOPS: Flat or profiled | Square or mitered | 1-3/8" & 1-3/4" reveals

SPECIFICATIONS

JAMB	MIN	MAX
Width	**3.5"**	**10"**
Length	**18"**	**No limit**
Thickness	**0.375"**	**1.75"** (2.25" w/ stop)
STOP	**MIN**	**MAX**
Width	**0.75"**	**2"**
Thickness	**0.313"**	**0.750"**
SPECIFICATION		**VALUE**
Output		**Up to 8 jambs/min per side**
Fasteners		**Brad nailers or staplers**
Controls		**Touch screen, foot pedal**
Alignment		**Top of jamb referenced**

KEY FEATURES

- **Two independent sides:** left and right run at the same time with separate operators for more throughput.
- **No changeover:** different jamb and header lengths, and square or mitered stops, need no machine adjustment.
- **Consistent reveal:** stop placement stays consistent regardless of jamb variations.
- **Quick pattern changes:** the touch screen sets fastener spacing, machine settings and diagnostics.
- **Low fastener indicator:** warns the operator before the fasteners run out.

STAGING

Finished assemblies exit automatically onto a racking system for orderly staging and easy transfer to a cart.

Kval HQ
825 Petaluma Blvd. S.
Petaluma, CA 94952

Kval TX
1591 Innovation Blvd.
Hutto, TX 78634

kvalinc.com ◆ (800) 553-5825

PROUDLY MADE IN THE USA

(800) 553-5825
sales@kvalinc.com
kvalinc.com

SCAN HERE